


partment. Block wheel diagonally opposite the one to be removed.

3. Assemble the jack and position hook in slot on bottom of bumper.

4. Insert wrench in jack, set finger control to "Up" position and "pump" until hook is seated firmly in place. Do not raise tire off of road surface.

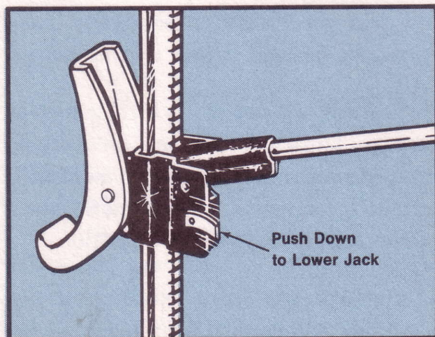

5. Remove skirt (if so equipped) at rear wheel opening. A wing nut is used at the

rear inner part of the skirt to attach it to the quarter panel.

