

- (9) Install lap cooler assembly, if so equipped.
- (10) Install fuse box.

LOWER INSTRUMENT PANEL ASSEMBLY FINISH PLATE

Removal

- (1) Remove lower instrument panel assembly.
- (2) Remove finish plate mounting nuts.
- (3) Remove finish plate.

Installation

- (1) Position finish plate to lower panel, install mounting nuts and tighten securely.
- (2) Install lower panel assembly.

GLOVE BOX Figure 28

Glove Box and Door Assembly

Removal

- (1) Remove lap cooler, if so equipped.
- (2) Remove glove box door hinge mounting screws.
- (3) Open glove box door and slide assembly to left.
- (4) Pull right side of assembly outwards and remove.

Installation

- (1) Insert left side of assembly into position.
- (2) Push right side of assembly inwards.
- (3) Move assembly to right, install hinge mounting screws, and tighten securely. Adjustment may be necessary.
- (4) Install lap cooler, if so equipped.

Glove Box Lock

Removal

- (1) Remove glove box and door assembly.
- (2) Put glove box lock in closed position.
- (3) Position glove box and door assembly with hinge towards you and box up.
- (4) Insert stiff wire in right side slot of lock mechanism and depress release tab into cylinder.
- (5) While holding release tab down in lock cylinder, insert key.
- (6) Remove wire and pull out lock cylinder.
- (7) Remove latch mounting screws.
- (8) Remove latch.

Installation

- (1) Position latch on glove box door, install mounting screws, and tighten securely.
- (2) Depress gray tab into lock cylinder and insert key.
- (3) Position lock cylinder so that it will be in closed position when installed.
- (4) Push lock cylinder into latch mechanism.
- (5) Remove key.
- (6) Install glove box and door assembly.

Glove Box

Removal

- (1) Remove glove box and door assembly.
- (2) Remove glove box lock.
- (3) Remove glove box mounting screws.
- (4) Remove glove box from glove box door.

Installation

- (1) Position glove box to glove box door, install mounting screws and tighten securely.
- (2) Install glove box lock.
- (3) Install glove box and door assembly.

MAP LAMP ASSEMBLY

Removal

- (1) Remove map lamp assembly mounting screws.
- (2) Pull assembly out far enough to disconnect electrical leads.
- (3) Remove map light assembly.

Installation

- (1) Connect electrical leads to assembly.
- (2) Position assembly into place making sure electrical wires are not pinched.
- (3) Install map light assembly mounting screw and tighten securely.

GEAR SHIFT INDICATOR POINTER

With Tilt and Telescopic Steering Wheel

Removal

- (1) Remove column cover.

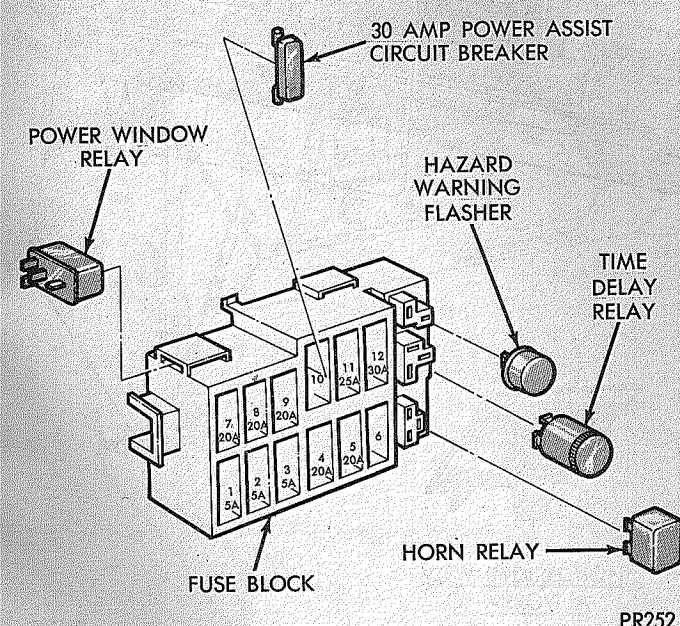


Fig. 27—Fuse Block and Relay Bank Carline C

TRIM PAD (C)**Figure 26****Removal**

- (1) Remove instrument panel upper cover.
- (2) Remove screw on left side of trim pad by "A" pillar.
- (3) Remove lower trim pad mounting screws.
- (4) Remove upper trim pad mounting screws.
- (5) Remove trim pad.

Installation

- (1) Position trim pad to panel.
- (2) Install upper trim pad mounting screws and tighten securely.
- (3) Install lower trim pad mounting screws and tighten securely.
- (4) Install mounting screw on left side of trim pad by "A" pillar and tighten securely.
- (5) Install instrument panel upper cover.

COLUMN COVER (C)**Removal**

- (1) Remove mounting screws.
- (2) Remove cover.
- (3) On vehicles without air conditioning it will be necessary to remove vent control cables.

Installation

- (1) Install vent control cables (if required).
- (2) Position cover into place, install mounting screws, and tighten.

PARKING BRAKE RELEASE HANDLE BEZEL**Removal**


- (1) Reach under instrument panel, rotate retaining clip on brake release handle, and pull outwards.
- (2) Remove bezel mounting screws.
- (3) Remove bezel and handle assembly.

Installation

- (1) Insert handle through opening in bezel.
- (2) Reach under instrument panel and insert handle on brake release. Make sure handle snaps into place.
- (3) Position bezel and handle assembly into place on lower instrument panel.
- (4) Install mounting screws, and tighten securely.

FUSE BOX**Figure 27**

The fuse box is located to the left of the steering column and is mounted on the lower instrument panel bottom edge, (Fig. 27).

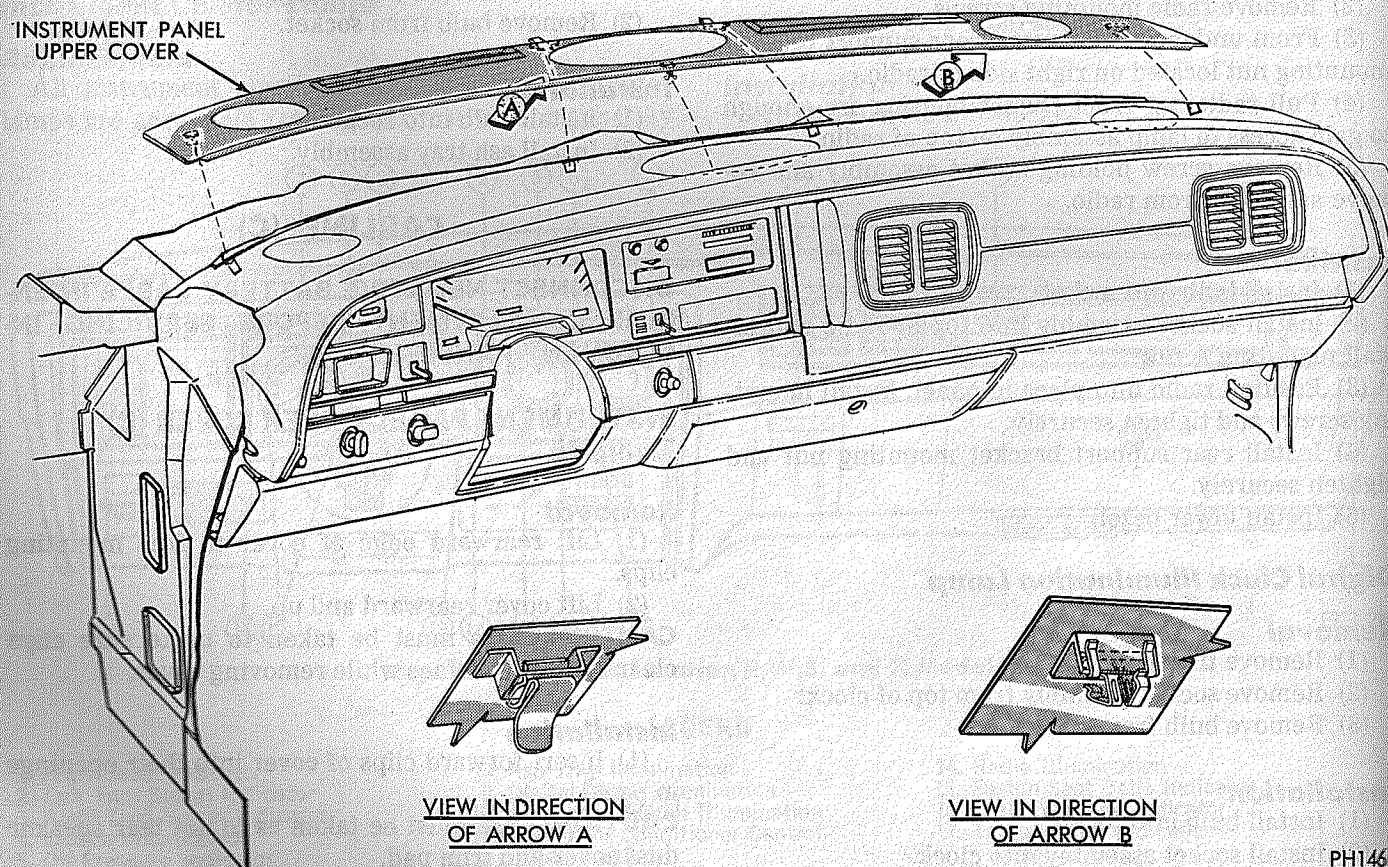**Fig. 25—Instrument Panel Upper Cover Carline C**